KitchenAid®

COOKTOP PARTS

30" Slide–In Range *
DESIGNER STYLE
Convection Oven

For Models: KGST307GWH0, KGST307GAL0, KGST307GBL0, KGST307GBT0, KGST307GBS0
(White) (Almond) (Black) (Biscuit) (Stainless Steel)

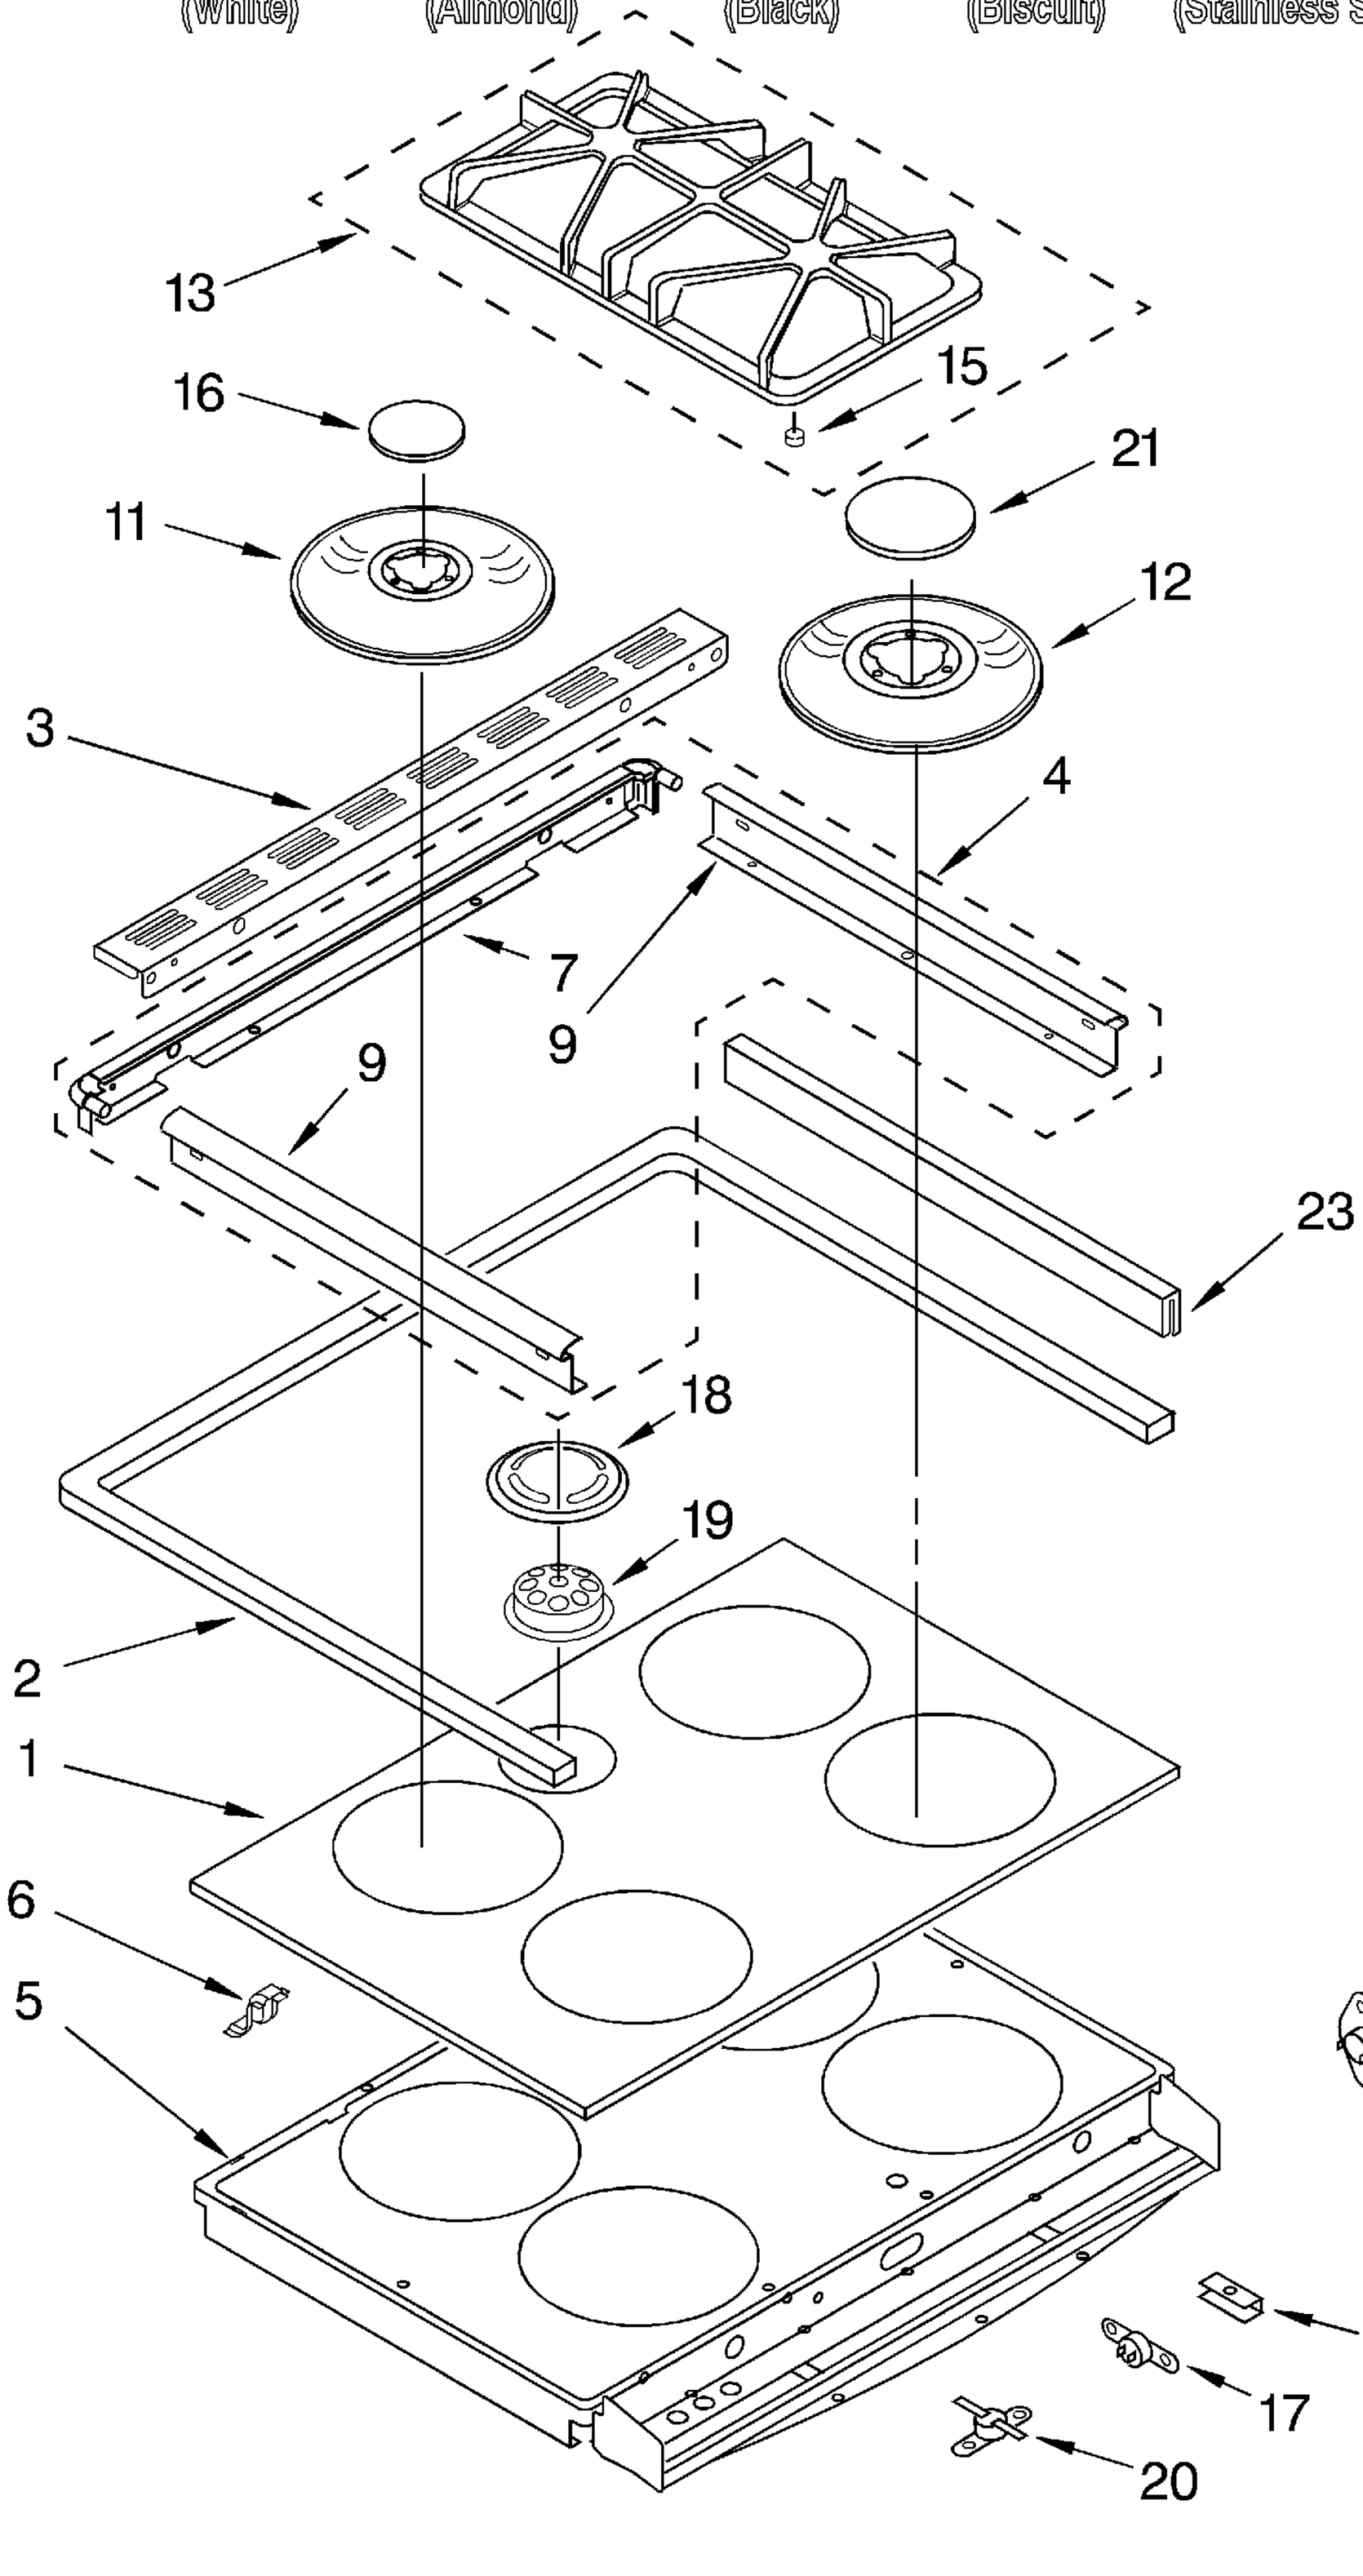

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Cooktop, Glass
	9752625CW	White
	9752625CT	Almond
	9752625CB	Black
	9752625CC	Biscuit
2	9780939	Gasket, Cooktop
3		Vent, Rear
	9752090PW	White
	9752090PB	Black
	9752090PT	Almond
	9752090PC	Biscuit
4		Frame, Cooktop
	9781832PW	White
	9781832PT	Almond
	9781832PB	Black
	9781832PC	Biscuit
5	9752632	Support, Burner
6	9751629	Bracket, Pivot
	9780265	Screw, (2) 10 x 3/8
	9752003	Washer (2)
7		Trim, Rear (Includes End Caps)
	9781831PW	White
	9781831PT	Almond
	9781831PB	Black
	9781831PC	Biscuit
8	9750821	Support Clips (4)
	9751871	Screw (4) #10 Type B 1"
9		Trim, Side
	9781828PW	White
	9781828PT	Almond
	9781828PB	Black
	9781828PC	Biscuit
	9780265	Screw (6)
11		Bezel, Small LR-RF
	9752624GS	Gray (White Model)
	9752624GB	Black (Al,Bl,Stn)
	9752624GM	Moleskin (Biscuit)
12		Bezel, Large RR-LF
	9752623GS	Gray (White Model)
	9752623GB	Black (Al & Bl Mdl)
	9752623GM	Moleskin (Biscuit)
13		Grates, 2 Burner
	9753219CS	Gray (White Model)
	9753219CB	Black (Al,Bl,Stn)
	9753219CM	Moleskin (Biscuit)
15	9752638	Pad, Grate (4)
16		Cap, Small (2)
	3188975	Gray (White Model)
	3185796	Black (Al,Bl,Stn)
	9752667GM	Biscuit Mdl.
17	341196	Thermo-Disc
	9780265	Screw, (2)
18		Cap, Vent
	9751271GW	White Model
	9751271GB	Black (Al,Bl,Stn)

	9751271GC	Biscuit Mdl.
19	9751366	Cap, Vent
20	9751984	Fuse, Bi-Metal
21		Cap, Large (2)
	3188974	Gray (White Model)
	3185793	Black (Al,Bl,Stn)
	9752666GM	Biscuit Mdl.
22	9752006	Thermostat, Fixed
23	9752034	Seal, Rubber (2)

COOKTOP BURNER PARTS

For Models: KGST307GWH0, KGST307GAL0, KGST307GBL0, KGST307GBT0, KGST307GBS0

(White) (Almond) (Black) (Biscuit) (Stainless Steel)

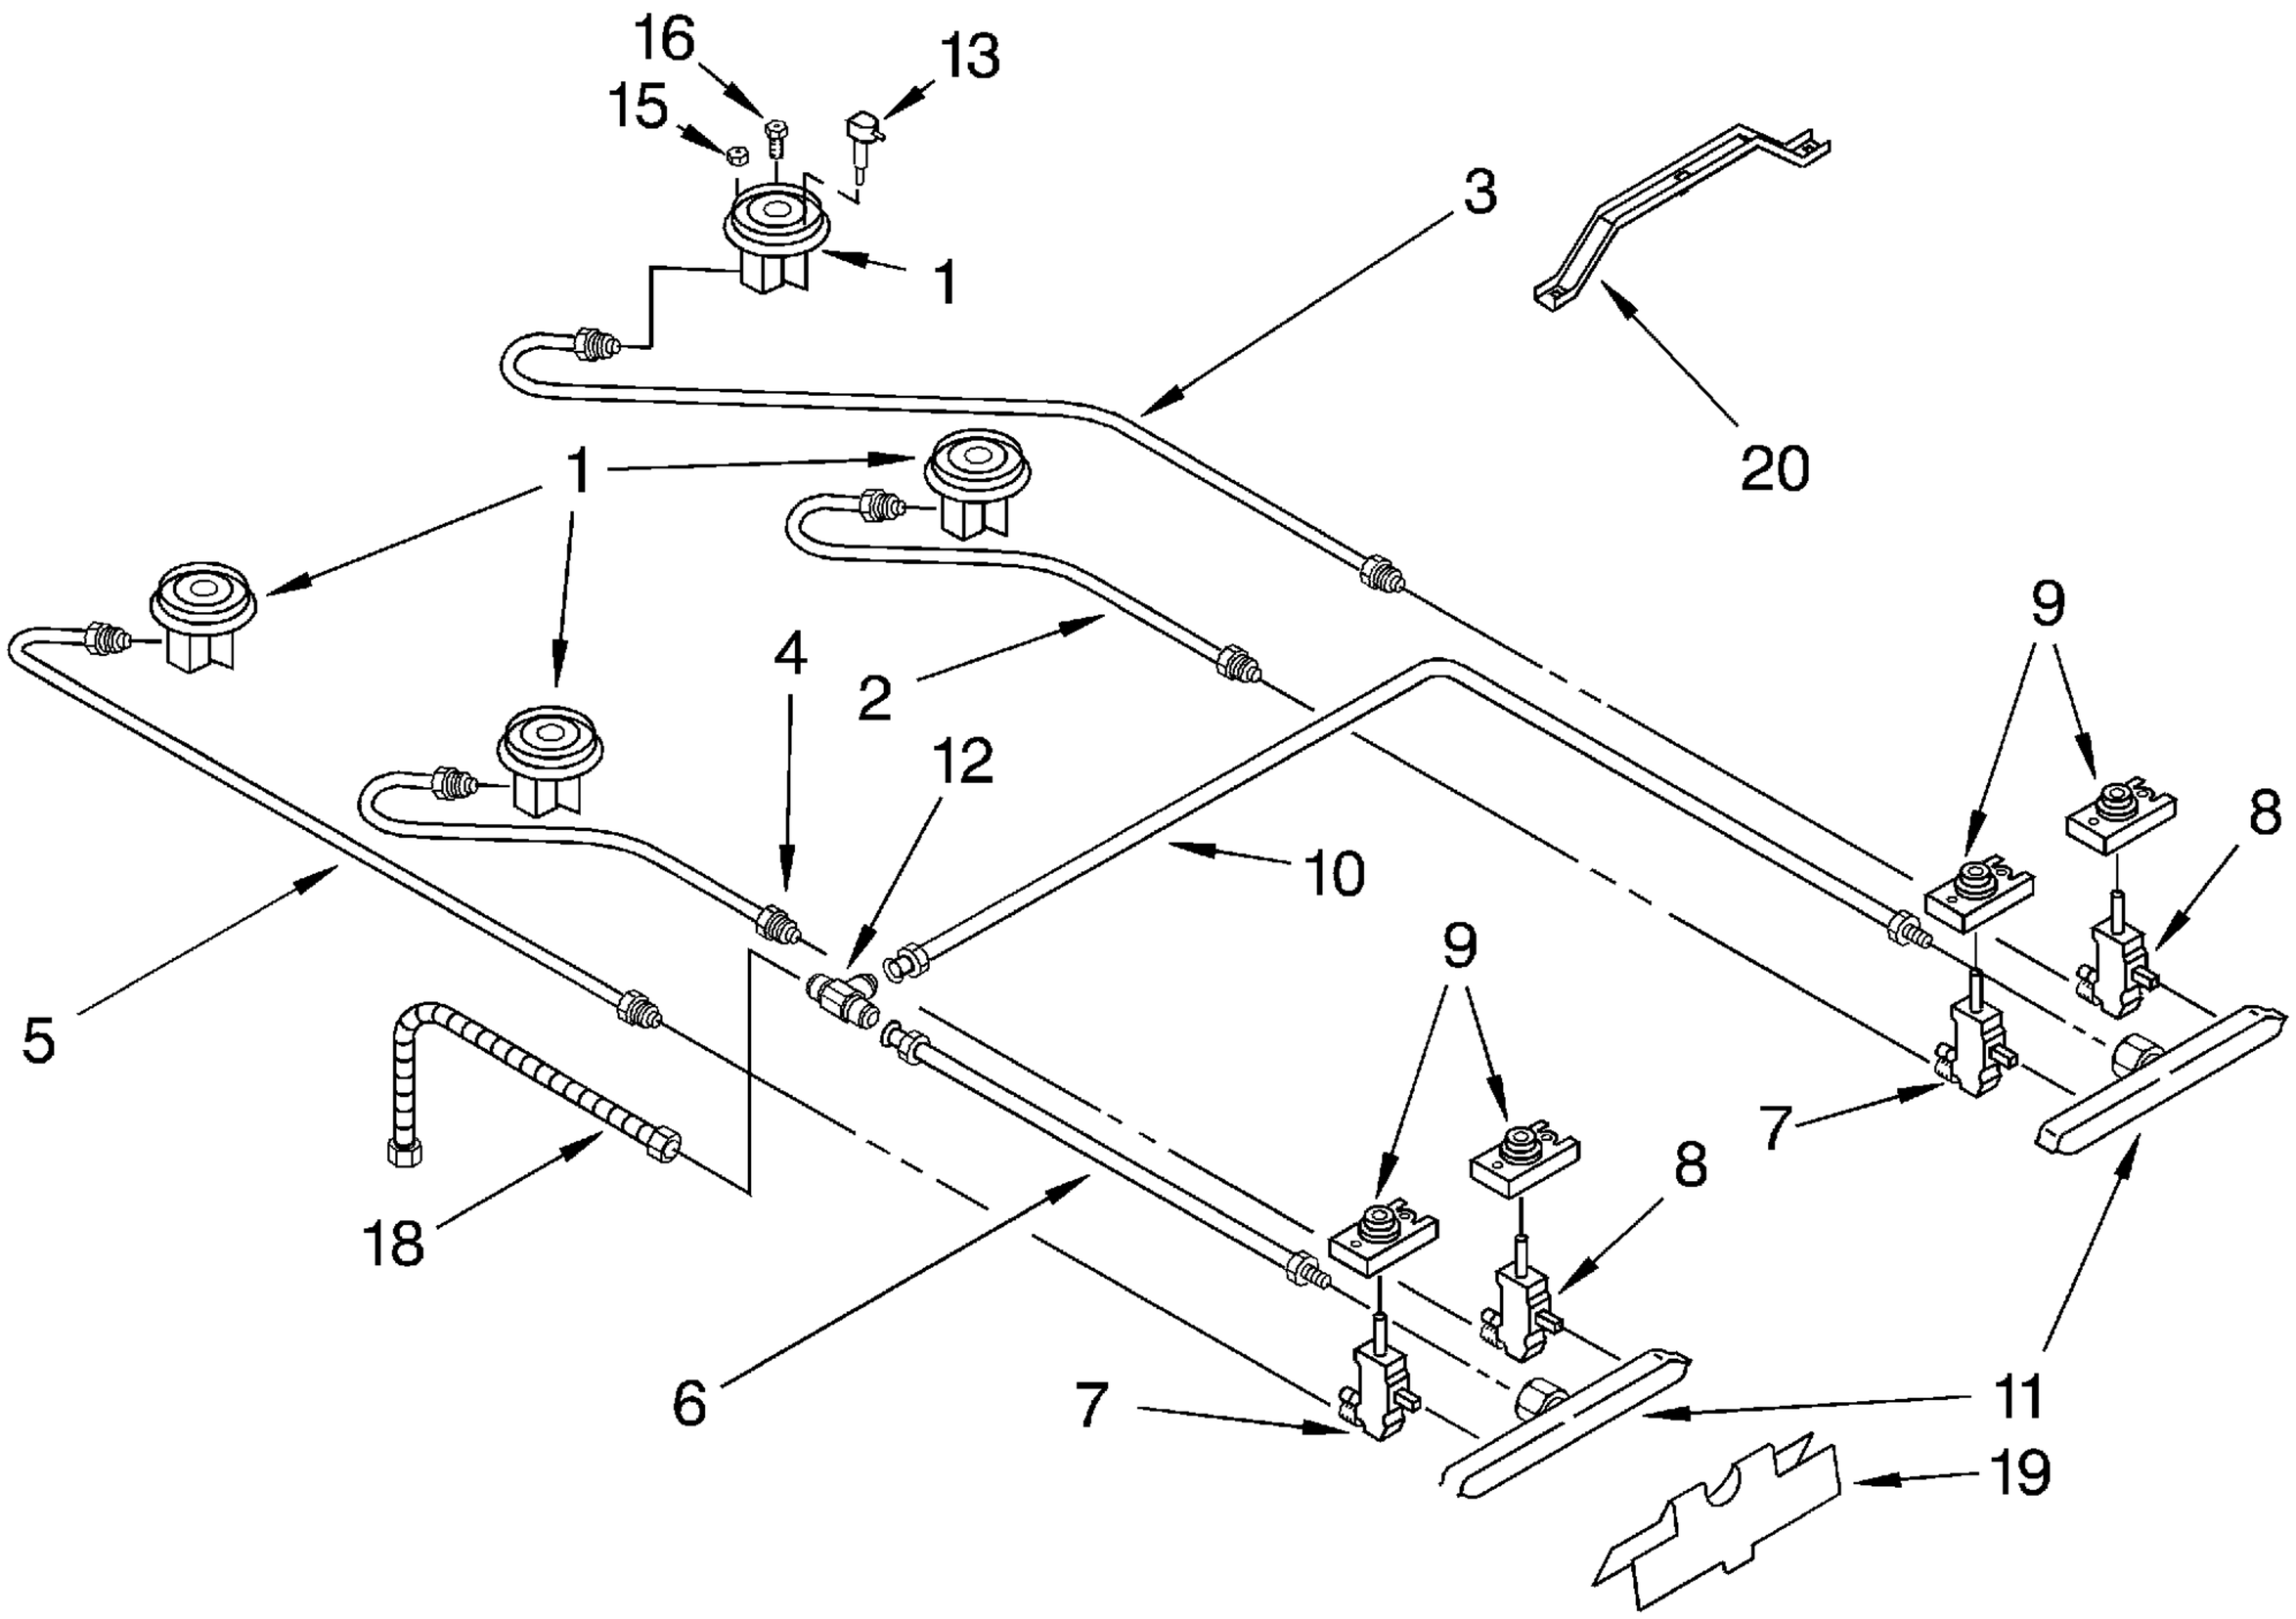

1		Burner, Sealed Gas
	9752641	Small (2)
	9752640	Large (2)
2	9752649	Tubing, Burner (RF)
3	9752650	Tubing, Burner (RR)
4	9752647	Tubing, Burner (LF)
5	9752648	Tubing, Burner (LR)
6	9752646	Tubing, Manifold (Left)
7		Valve, Burner
	9751333	Small (2)
8		Valve, Burner
	3185829	Bolt, Gas Valve (4)
	9751334	Large (2)
9	9751325	Switch, Ignitor (4)
10	9751285	Tubing, Manifold (Right)
11	9751287	Manifold (2)
12	9751283	Tee, Flare
13	3185804	Electrode
15	3185805	Speed nut
16	3185947	Orifice, Small #56
	3185948	Orifice, Large #52
18	9751854	Tubing, Flex
19	9781457	Bracket, Manifold
20	9752627	Bracket, Burner
	9780265	Screw

CONTROL PANEL PARTS

For Models: KGST307GWH0, KGST307GAL0, KGST307GBL0, KGST307GBT0, KGST307GBS0
(White) (Almond) (Black) (Biscuit) (Stainless Steel)

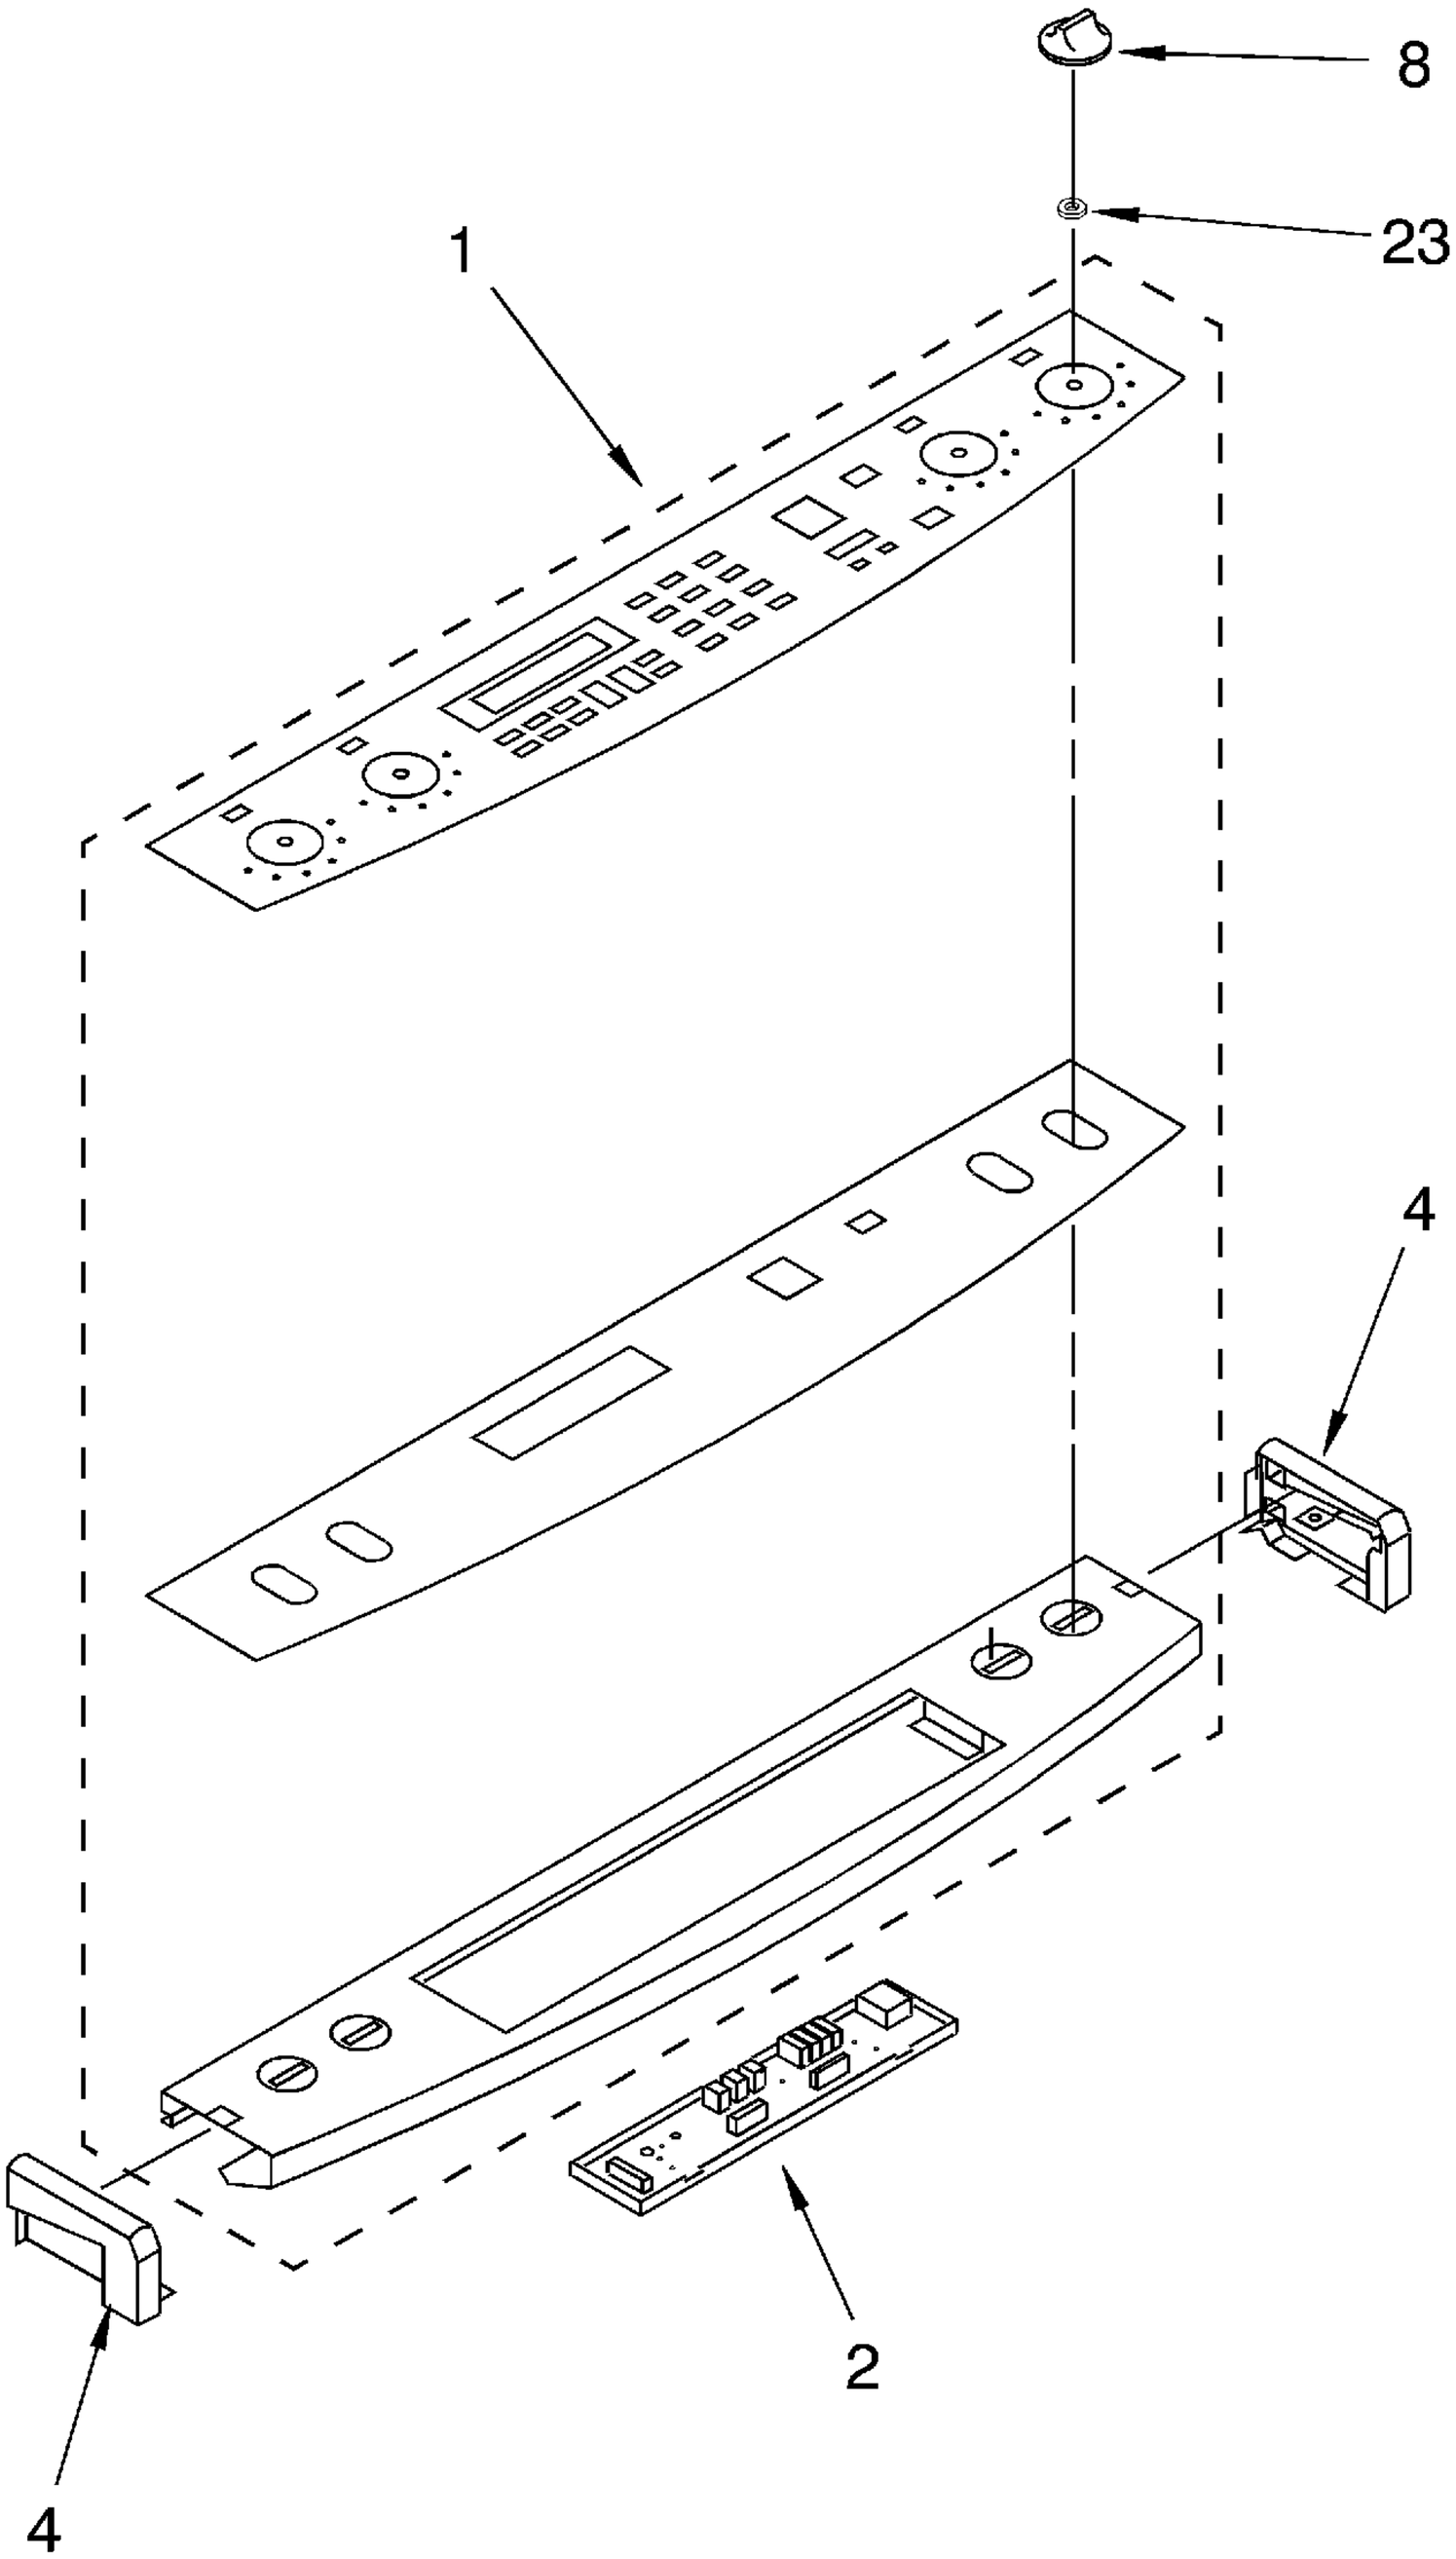

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Console, Glass
	9751889	White Mdl.
	9751893	Almond Mdl.
	9751895	Black & Stn.Mdl.
	9753408	Biscuit Mdl.
2	3191106	Timer, Electronic
	9780271	Screw, (2)
4		End Cap Right Hand
	9751040FW	White
	9751040FT	Almond
	9751040FB	Black
	9751040FC	Biscuit
		End Cap Left Hand
	9751039FW	White
	9751039FT	Almond
	9751039FB	Black
	9751039FC	Biscuit
	9780265	Screw, (2) 10 x 3/8
8		Knobs, Control (4)
	9751199FW	White Mdl.
	9751199FT	Almond Mdl.
	9751199FF	Black &Stn.Mdl.
	9751199FC	Biscuit Mdl.
23		Washer, Console (4)
	9751450	White Mdl.
	9751451	Almond Mdl.
	9751449	Black &Stn.Mdl.
	9753321	Biscuit Mdl.

DOOR AND DRAWER PARTS

For Models: KGST307GWH0, KGST307GAL0, KGST307GBL0, KGST307GBT0, KGST307GBS0

(White) (Almond) (Black) (Biscuit) (Stainless Steel)

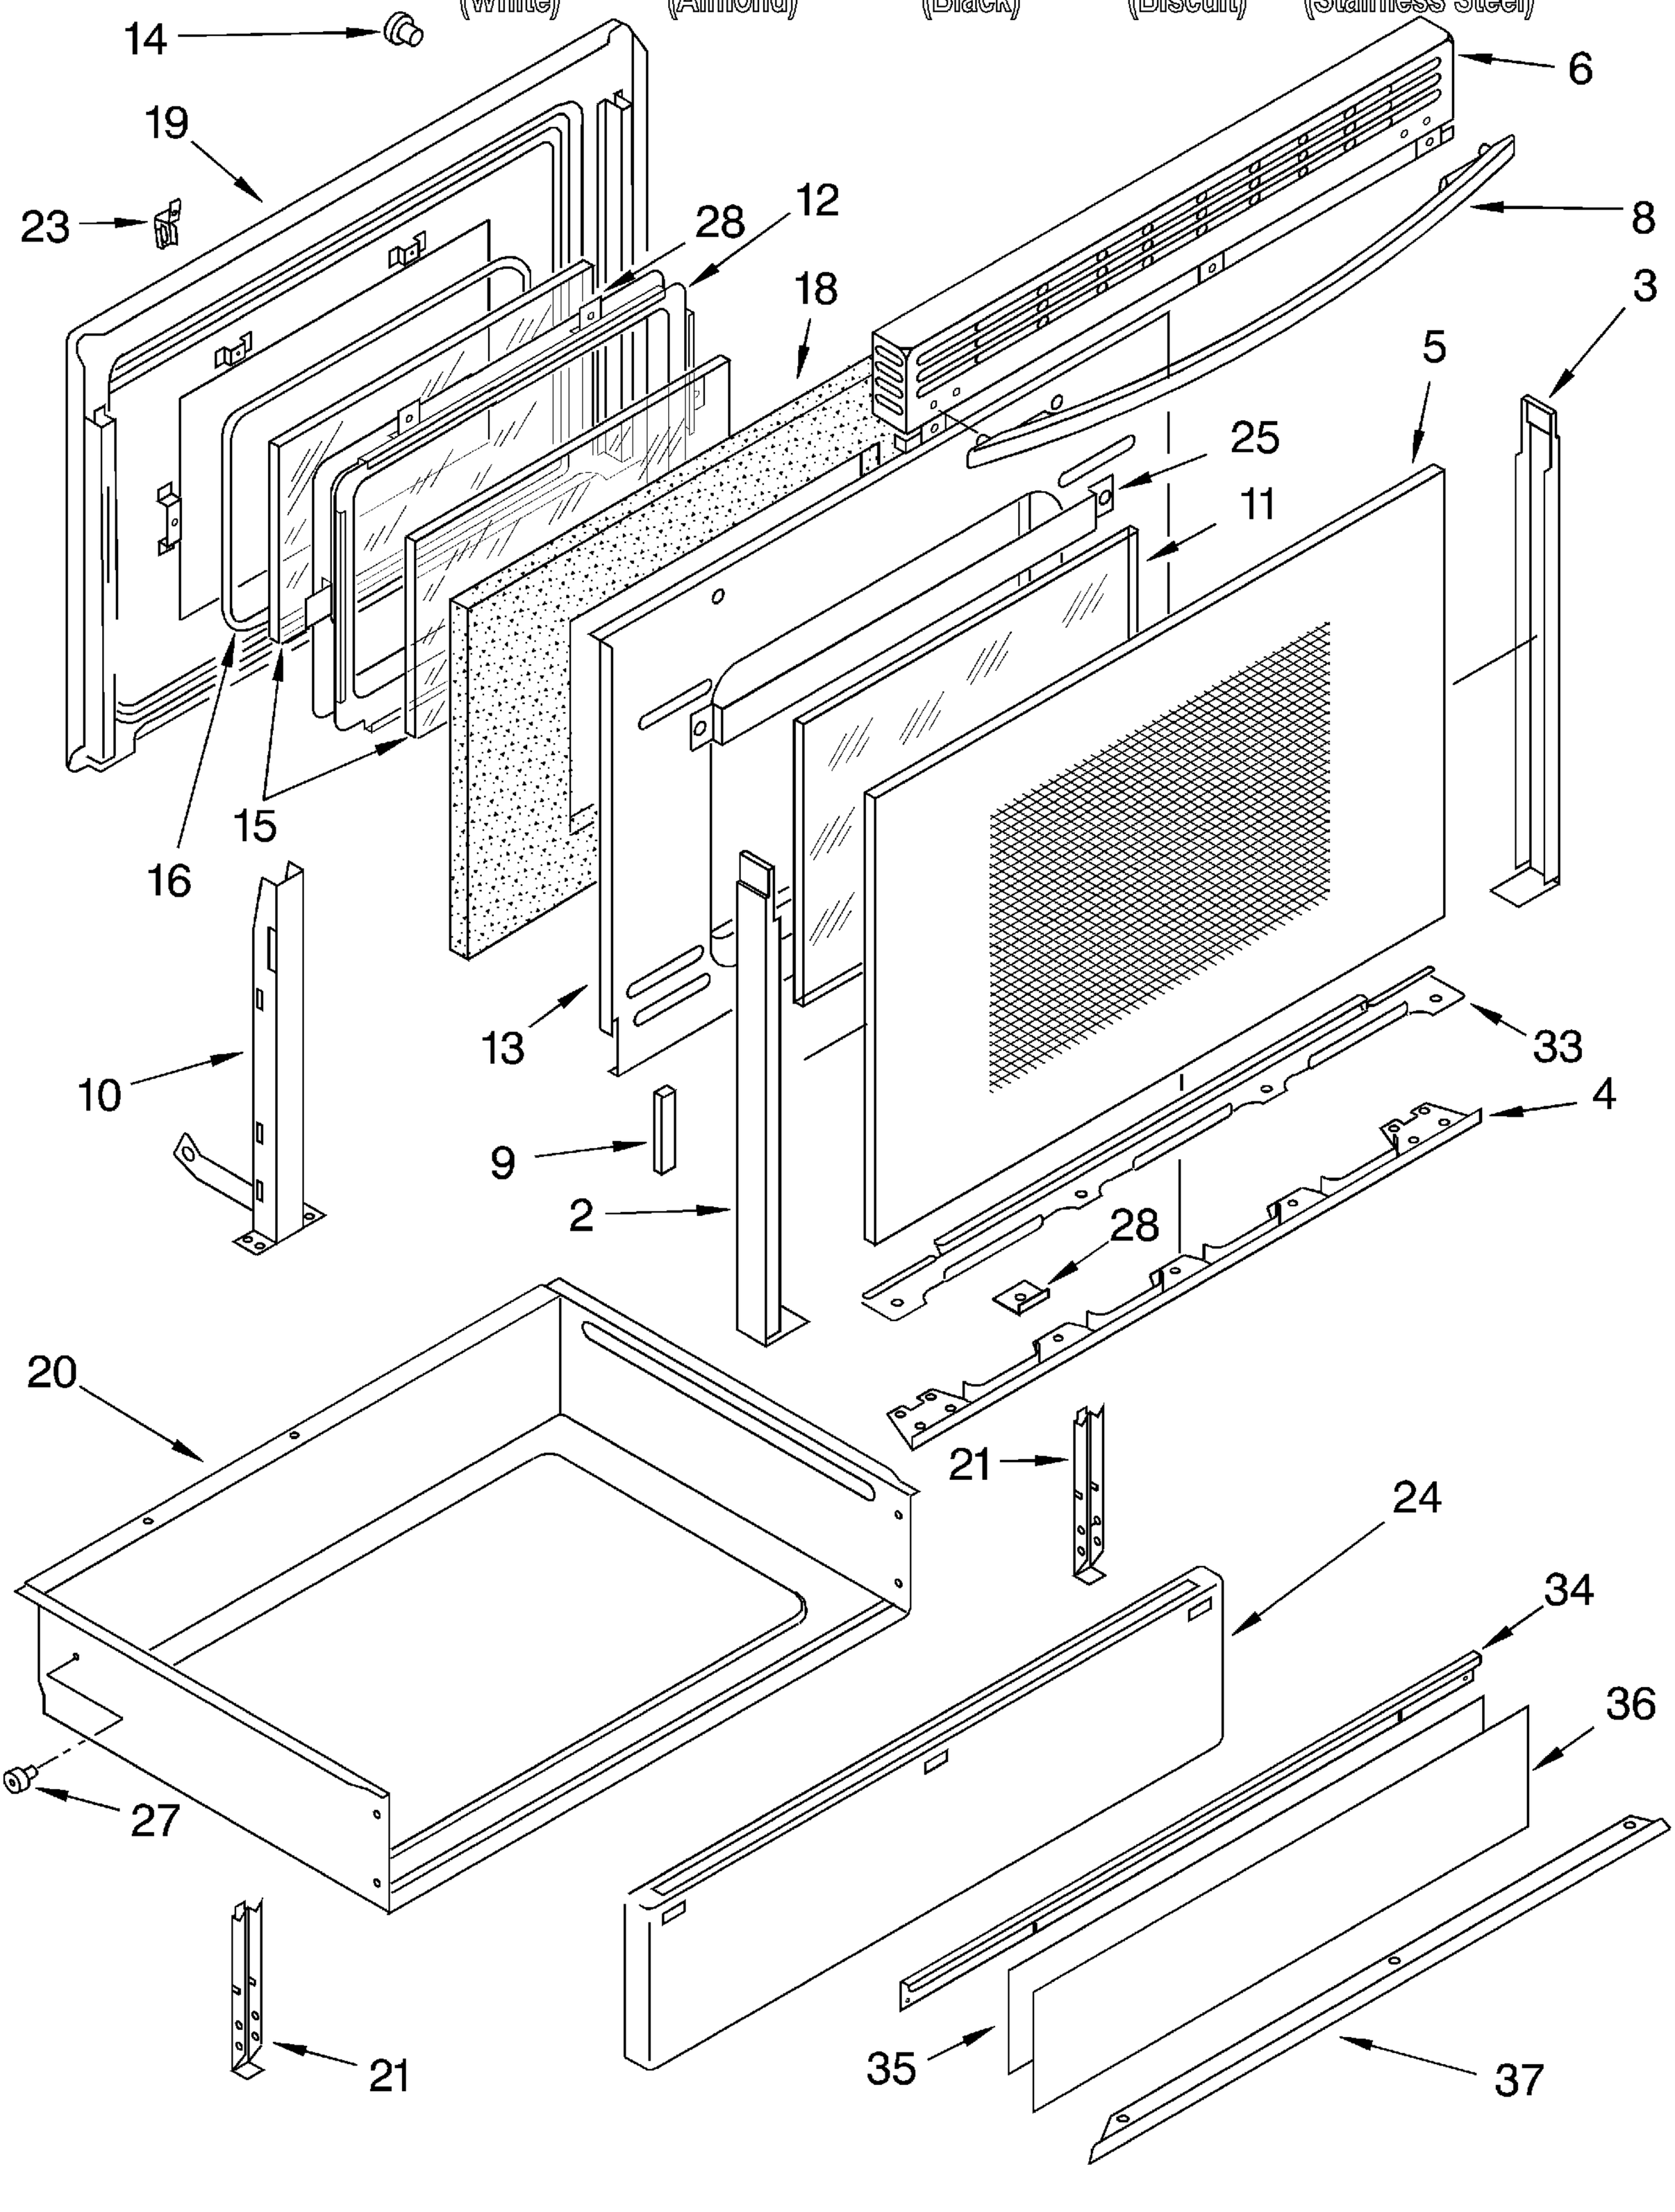

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

2		Trim, Door-Left
	9750631PW	White
	9750631PT	Almond
	9750631PB	Black
	9750631PC	Biscuit
3		Trim, Door-Right
	9750632PW	White
	9750632PT	Almond
	9750632PB	Black
	9750632PC	Biscuit
4		Trim, Door Bottom
	9781209PW	White
	9781209PT	Almond
	9781209PB	Black
	9781209PC	Biscuit
	9780265	Screw (4) 10 x 3/8
5		Glass, Door
	9781627PW	White
	9781627PT	Almond
	9781627PB	Black
	9753378	Stainless
	9781627PC	Biscuit
6		Vent, Door
	9753498GW	White
	9753498GB	Black
	9753498GT	Almond
	9753498GC	Biscuit
	9780265	Screw (2)
	9781659	Gasket, Door Vent
	9781490	Seal, Door (2)
8		Handle, Door
	9780523PW	White
	9780523PT	Almond
	9780523PB	Black
	9780523PC	Biscuit
	9781072	Screw (4) 10 x 1/2
9	9781449	Gasket, Door Glass
10	9750234	Hinge, Door R or L
	9780265	Screw (4) 10 x 3/8
11	9781592	Baffle, glass
12	9781602	Frame, Glass
13	9781586	Shield Door
14	9780771	Bumper, Rubber
15	9781593	Glass, Pyro Door
16	9781587	Seal, Glass
	9780271	Screw (2) 8 x 1/4
18	9781626	Insulation
19	9781600GM	Liner, Door
20	9780583	Drawer & Roller
	9750257	For Stn.Steel Mdl.
21	9750169	Bracket, Drawer
	9780272	Screw (4) 10 x 1/2
	9780265	Screw (2)
23	9750676	Retainer, clip

24		Front, Drawer
	9750168PW	White
	9750168PT	Almond
	9750168PB	Black
	9750569PB	For Stn.Steel Mdl.
	9750168PC	Biscuit
25	9750693	Heat Channel
27	423713	Support, Roller
	90296	Clip
28	9781502	Spacer, Door (8)
	9780265	Screw (8)
33	9781771	Steam deflector
34	9750614PB	Trim,D rawer-Top For Stn.Steel Mdl.
35	9753329	Spacer(Stn.Mdl.)
36	9753293	Panel, Drawer For Stn.Steel Mdl.
37	9750613PB	Trim,D rawer-Btm For Stn.Steel Mdl.

OVEN CHASSIS PARTS

For Models: KGST307GWH0, KGST307GAL0, KGST307GBL0, KGST307GBT0, KGST307GBS0

(White) (Almond) (Black) (Biscuit) (Stainless Steel)

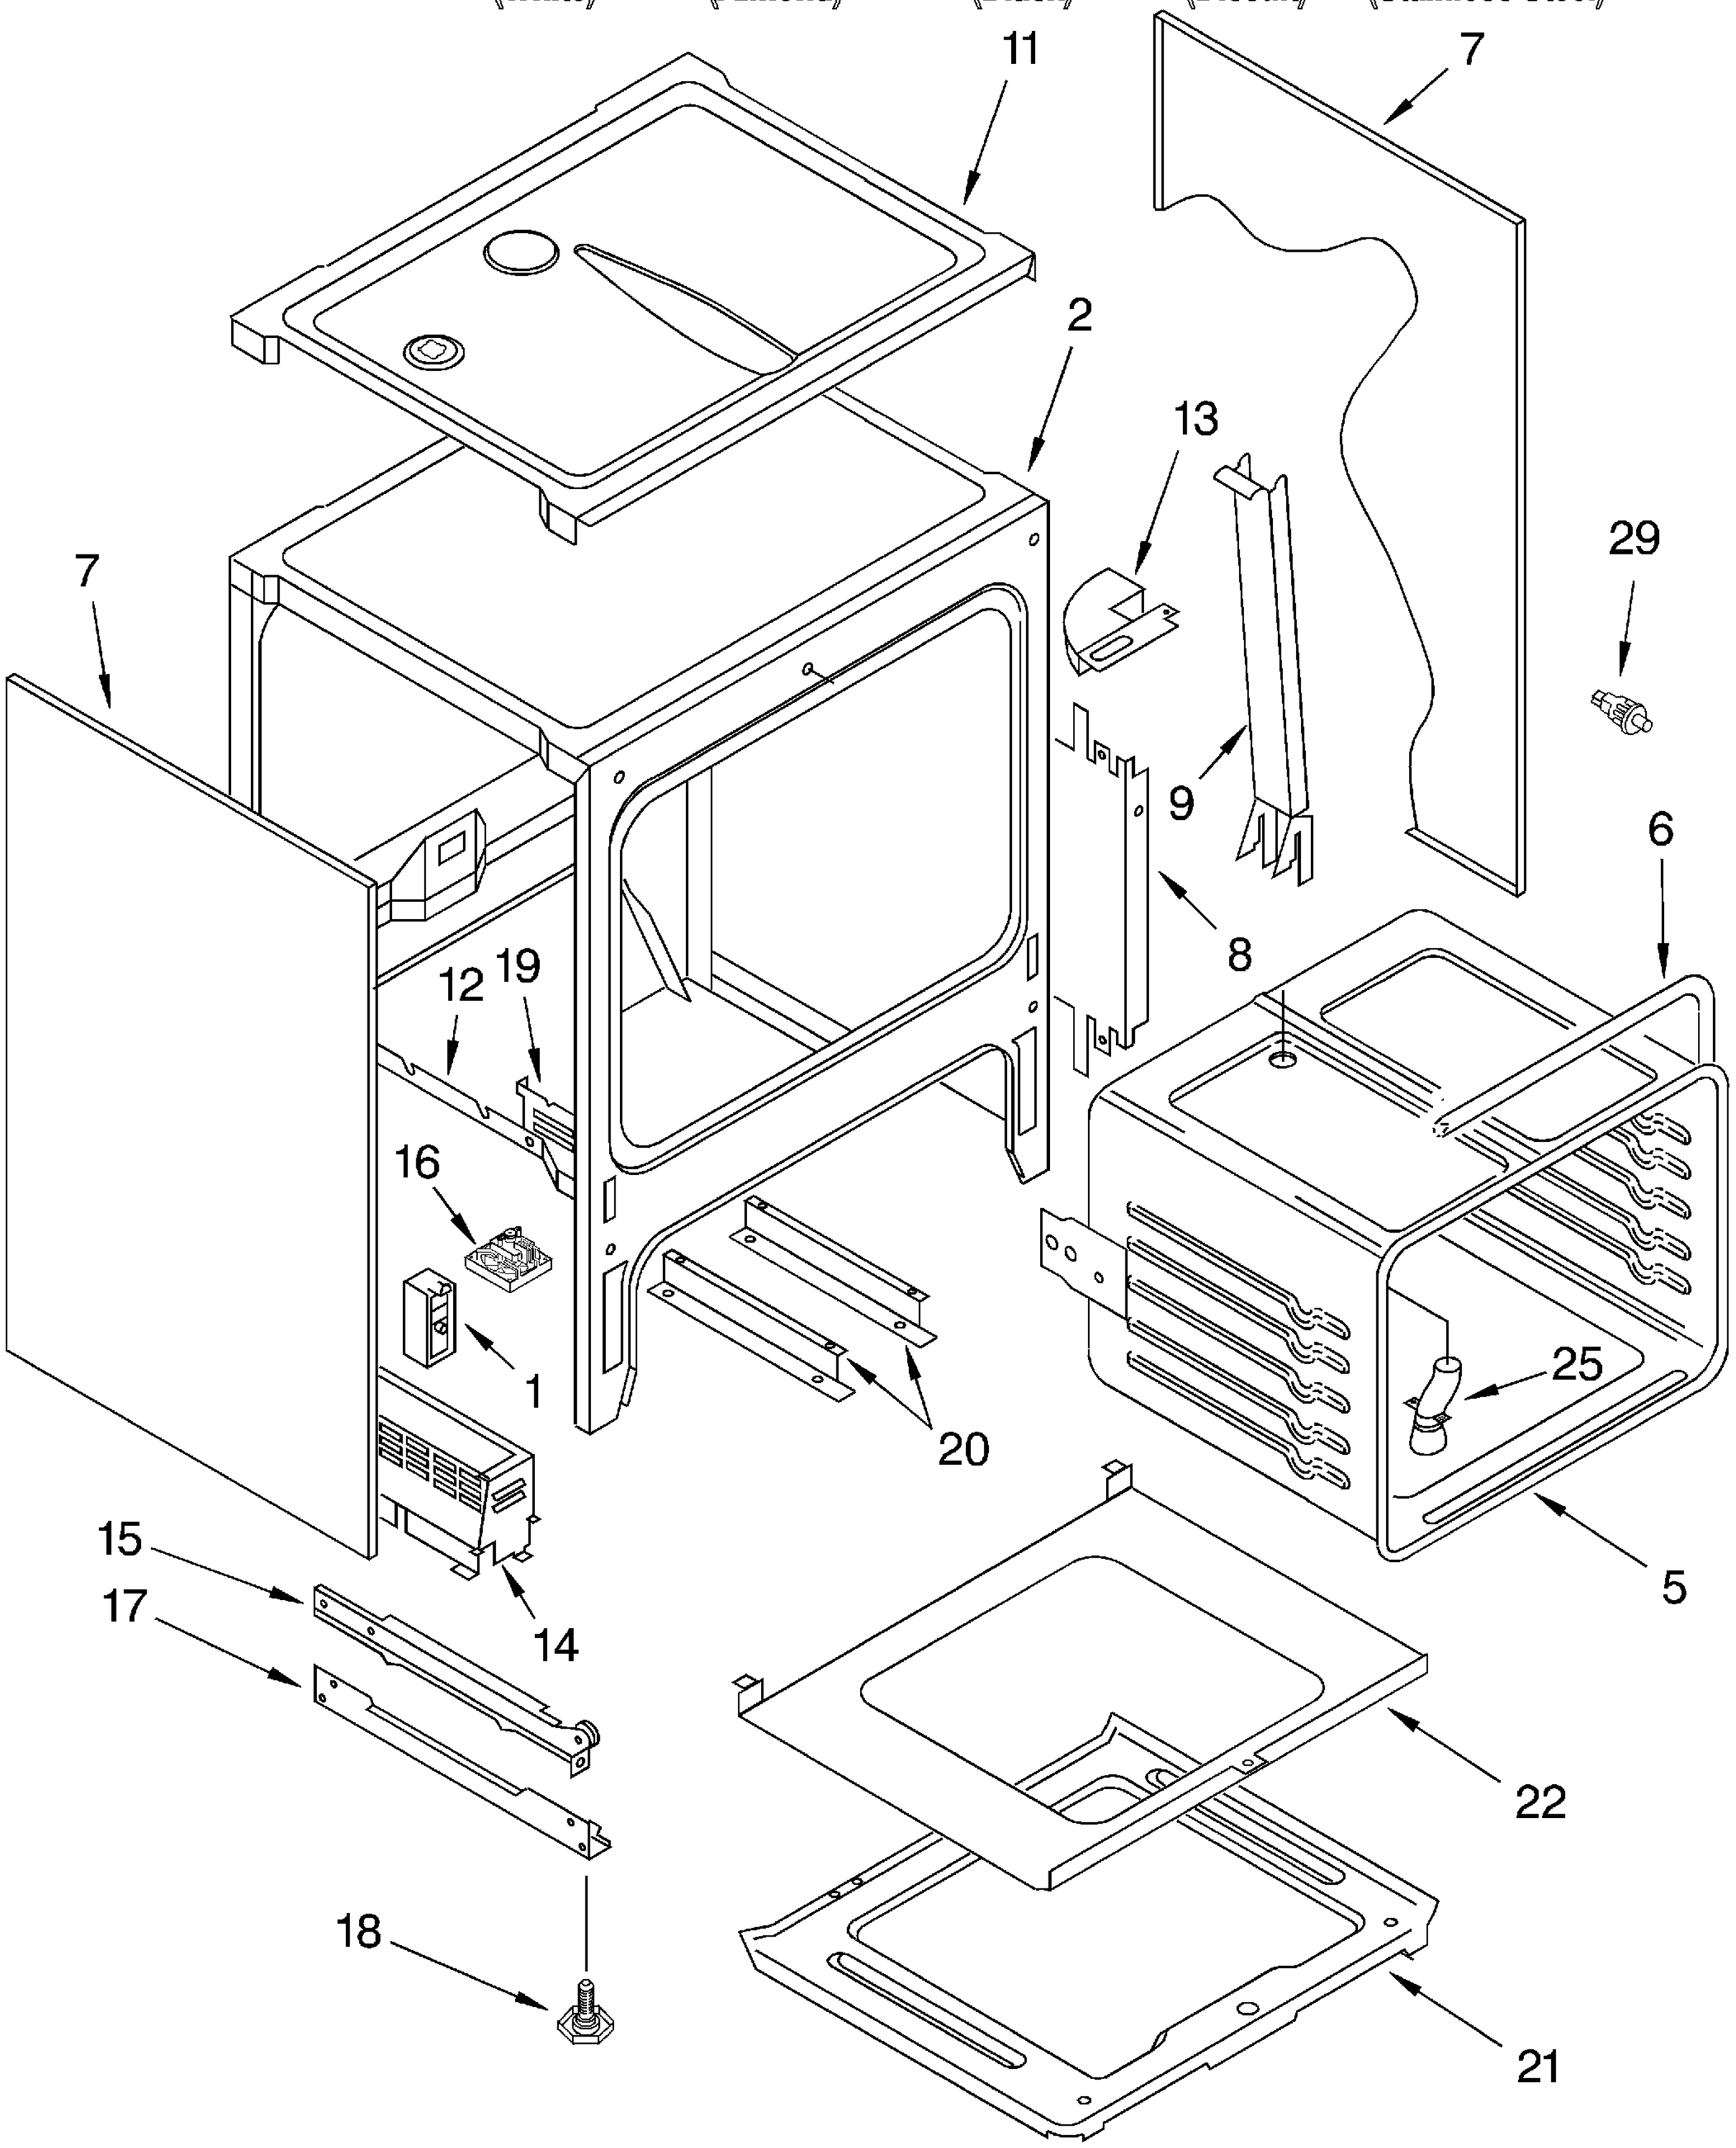

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4454392	Module, Spark
2	9750514GM	Chassis, Front
5	9753339GM	Oven Liner
6	3191649	Gasket Oven
7		Oven, Side L or R
	9750148PW	White
	9750148PT	Almond
	9750148PB	Black
	9750148PC	Biscuit
	9780265	Screw (4) 10 x 3/8
8	9780664	Shield, Insulation
	9780265	Screw (2)
9	9751789	Fan Duct, Side
	9780265	Screw, (4)
11	9752637	Burner Box
	9780269	Screw, #8-32 x 3/8
	9780265	Screw (8) 10 x 3/8
	9780275	Screw, (2) 8 x 3/8
12	9752735	Retainer, Insulation
	9780265	Screw (9) 10 x 3/8
13	9751653	Duct, Top
	9780265	Screw, (2)
14	9751060	Support, Fan
15	9750223	Drawer Rail, Left 10 x 3/8
	9750224	Drawer Rail, Right
	9780265	Screw (2) 10 X 3/8
16	9751020	Motor, Fan
	9751808	Screw, (3) #8 x 1"
17	9750147	Bottom Rail (2)
	9780265	Screw, (8) 10 x 3/8
18	312701	Foot, (4)
19	9750149	Hinge, Door L or R
	9780265	Screw, (2) 10 x 3/8
	9780272	Screw (2) 10 x 1/2
20	421771	Support Rail, Pan
	9780265	Screw, (2) 10 x 3/8
21	9781025	Shield, Drawer
	9780265	Screw, 10 x 3/8
22	9751641	Plate, Reflectance
	9780265	Screw, 10 x 3/8
25	9751592	Vent Tube
	9780265	Screw, 10 x 3/8
29	9781581	Door Switch

BROILER & OVEN BURNER PARTS

For Models: KGST307GWH0, KGST307GAL0, KGST307GBL0, KGST307GBT0, KGST307GBS0
(White) (Almond) (Black) (Biscuit) (Stainless Steel)

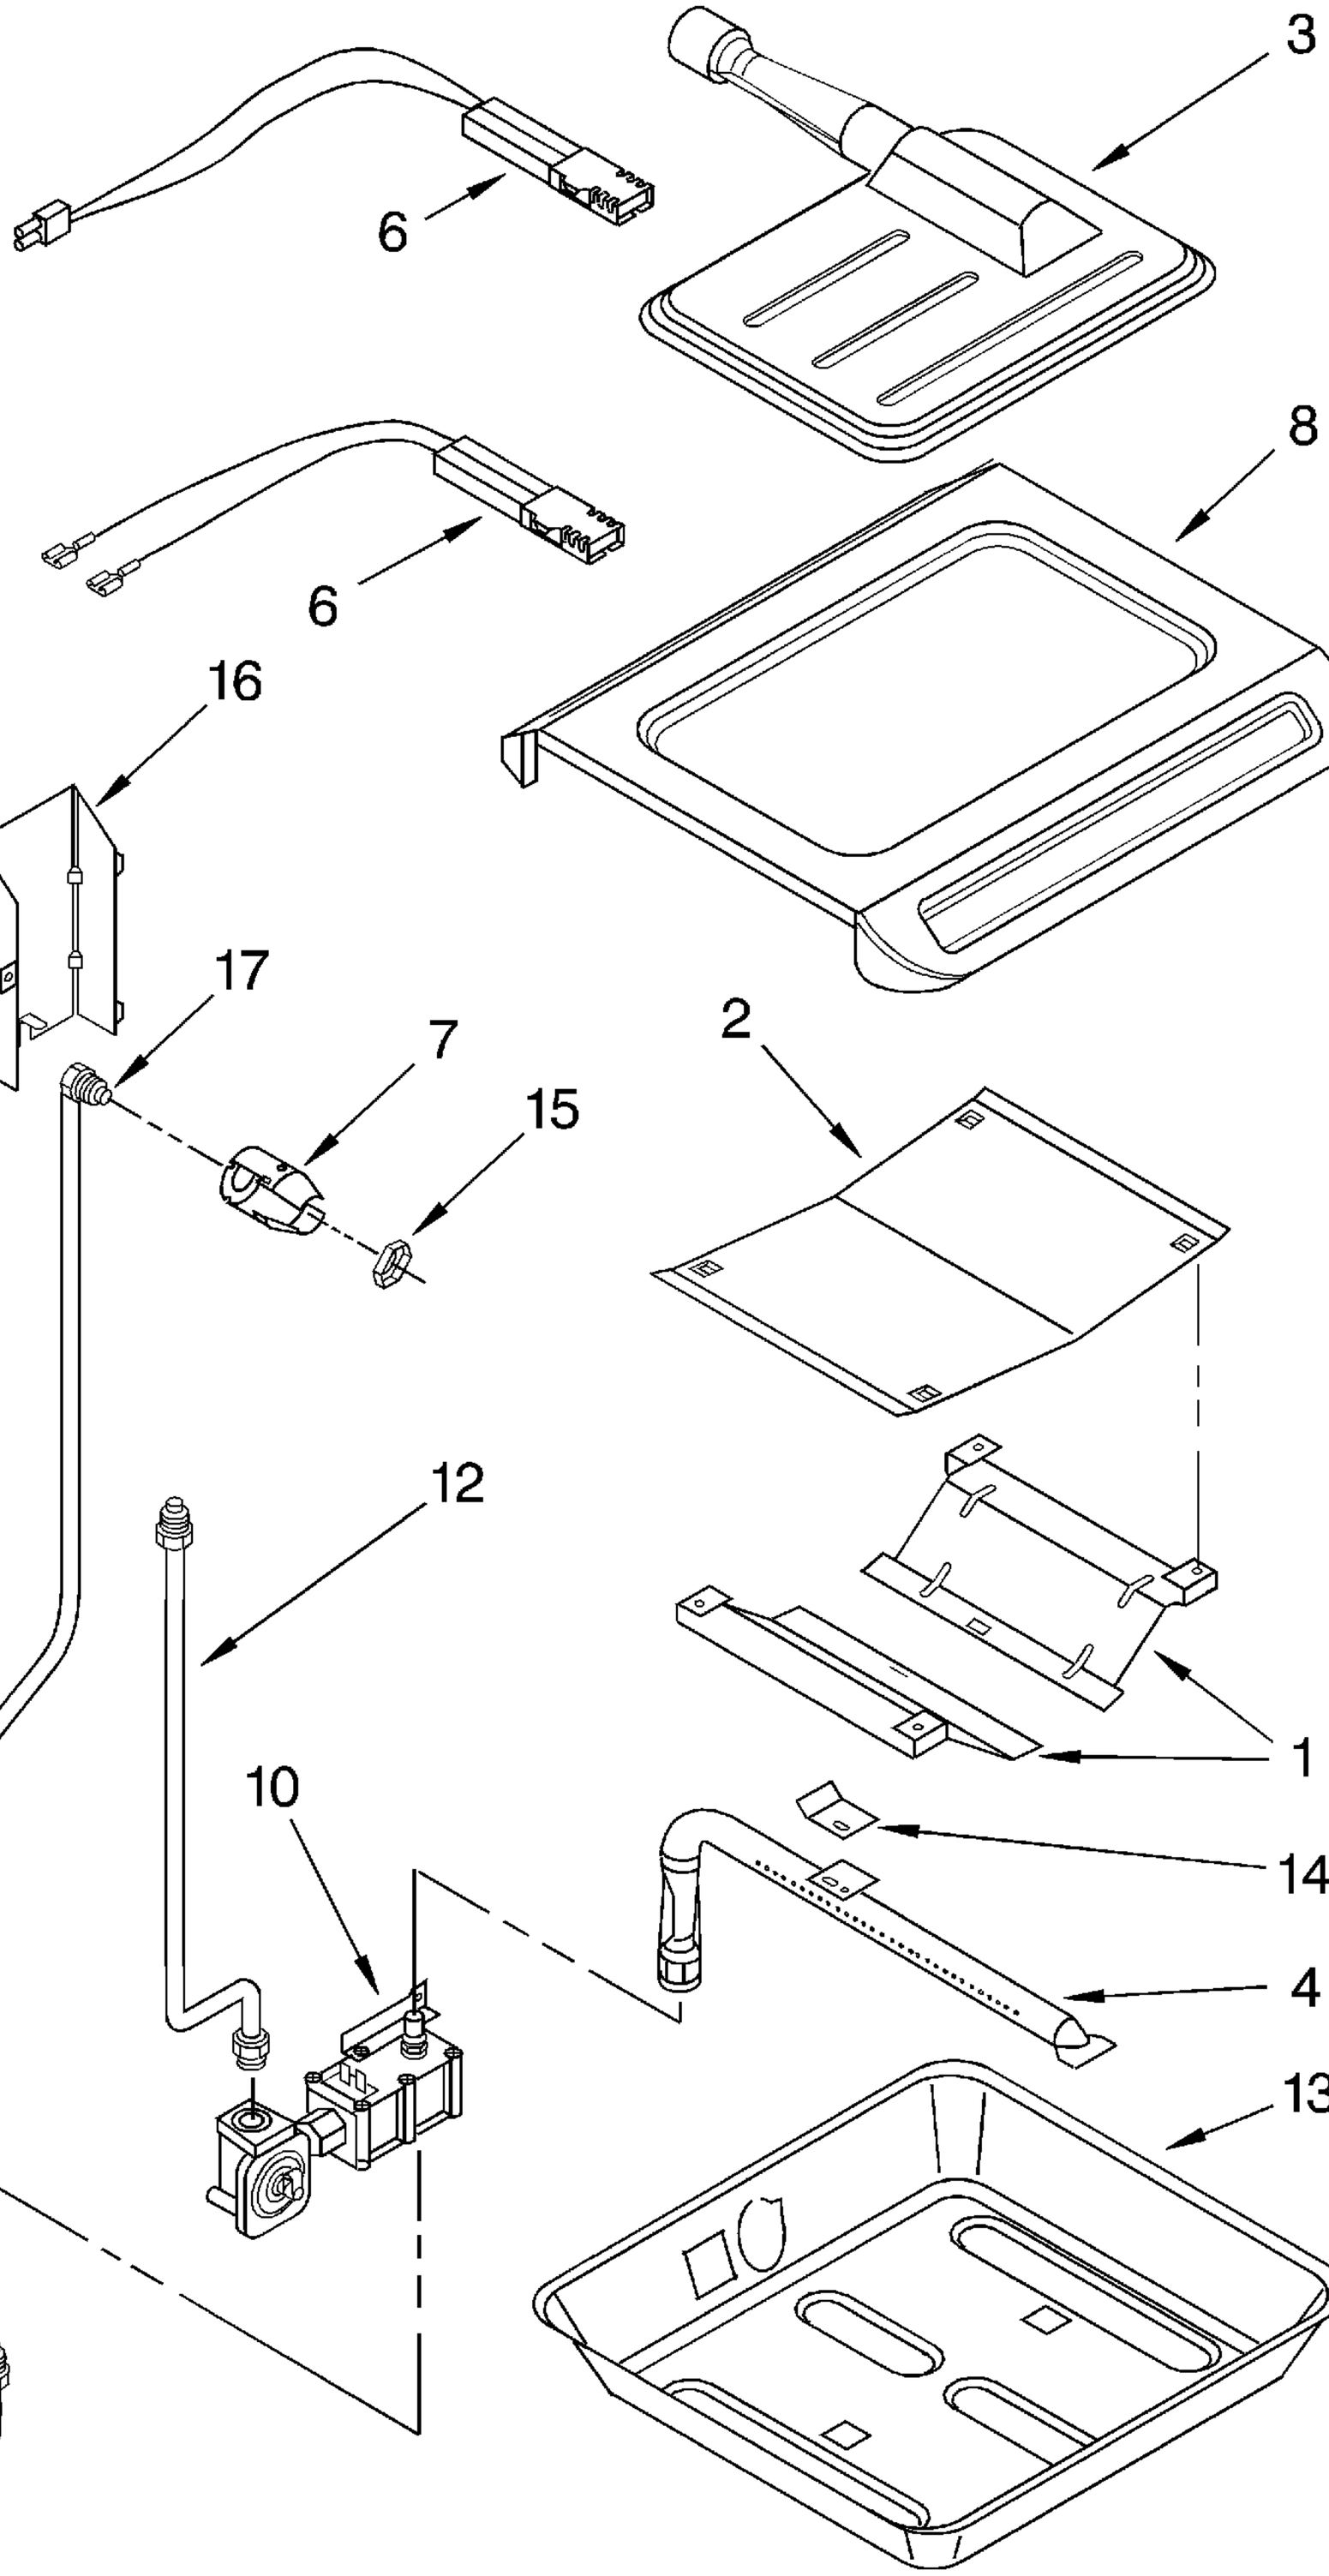

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	9752737	Shield, Oven (2)
	9751643	Screw,
2	9752738	Flame Shield, Bake
	9751643	Screw, 10-3/8 (2)
3	9752922	Burner, Broiler
	9751644	Screw, 10-24x1/2
4	9751367	Burner, Bake
6	9753108	Ignitor, Common Bake & Broil
	9751643	Screw, 10-24x3/8
7	9752858	Bracket, Broil Shooter
	9751203	Nut, 5/8 x 18
	9780265	Screw, 10 x 3/8
8	9752736GM	Pan, Oven Bottom
9	9751173	Tubing, Broil
10	9752698	Valve & Regulator Assembly
	776593	Screw, 1/4-20x1/2
12	9781015	Tubing, Valve To Regulator
13	9752734	Pan Support, Bake
14	9751600	Bracket, Bake
	9751643	Screw, 10-24x3/8
15	9751203	Nut #18 5/8
16	9752920	Coverbox (Broiler Tubing)
	9780265	Screw
17	9752716	Orifice #54

OVEN PARTS

For Models: KGST307GWH0, KGST307GAL0, KGST307GBL0, KGST307GBT0, KGST307GBS0

(White) (Almond) (Black) (Biscuit) (Stainless Steel)

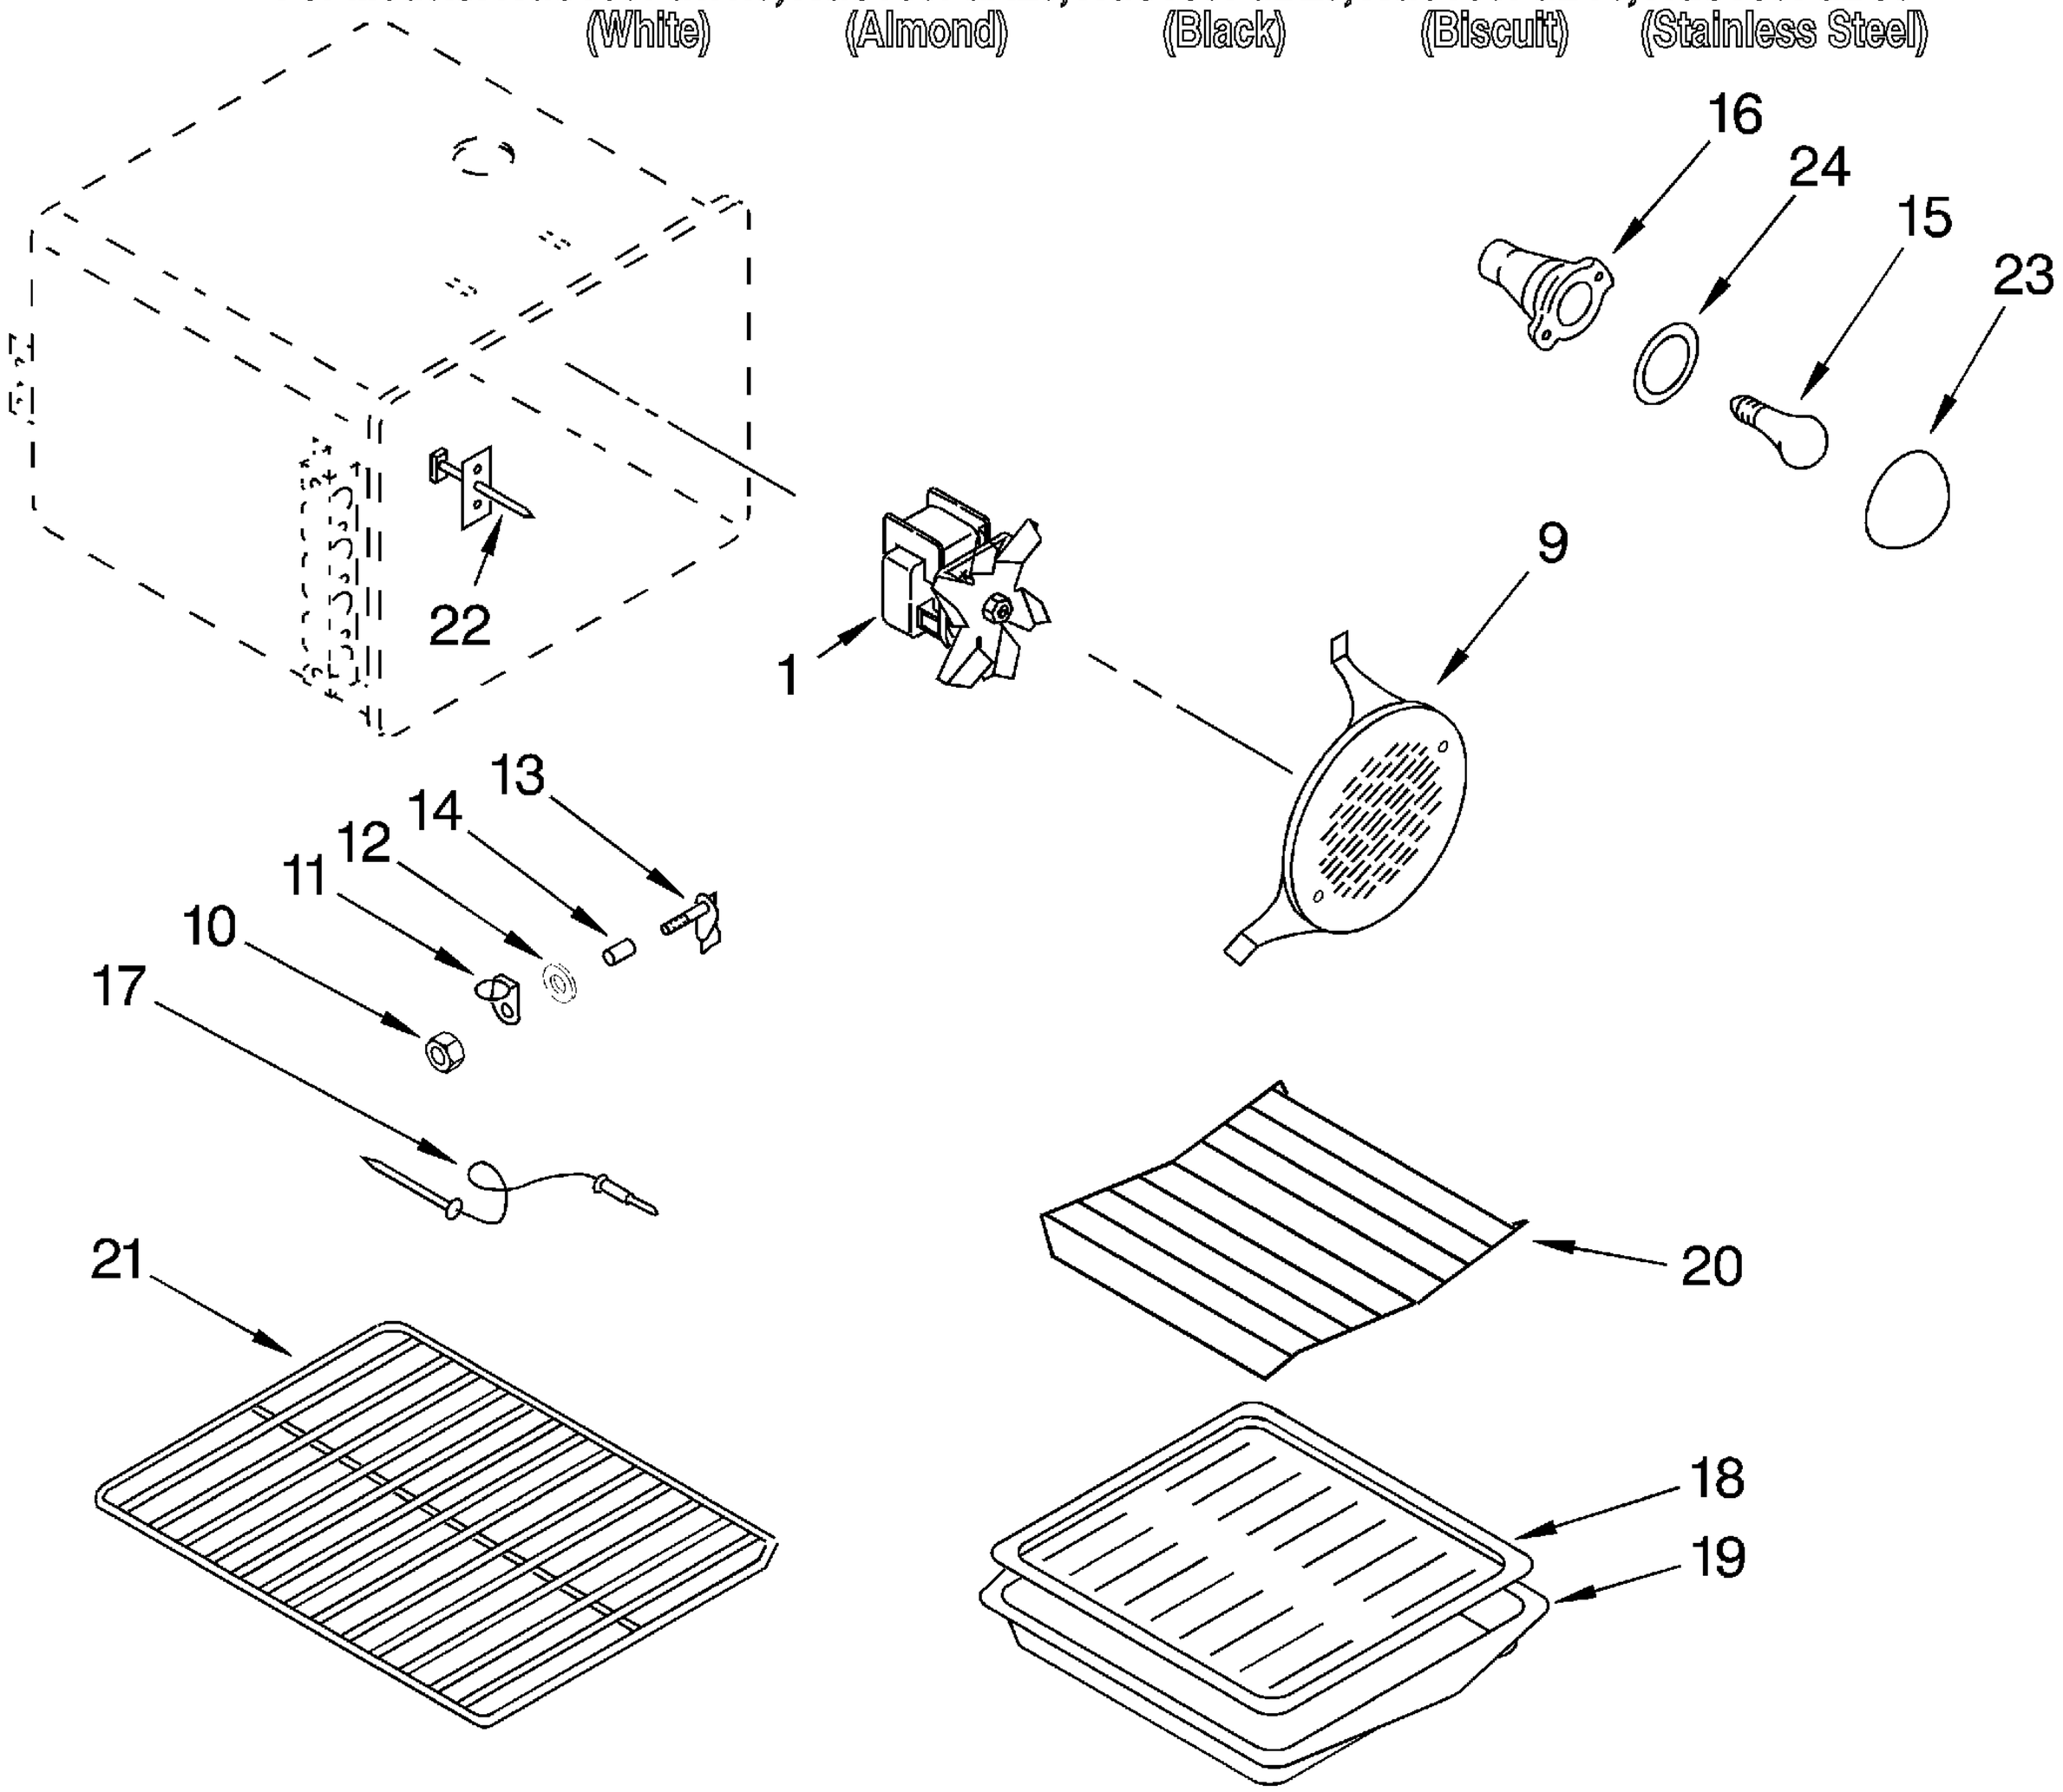

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	9781543	Assembly, Fan
	9780272	Screw, #10 x 1/2
9	9751904GM	Baffle, Convection
	9780852	Screw (2) 8 x 3/8
10	4167277	Lock-Nut, Cvr.Jack
11	4167266	Jack Cover
12	305289	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
15	8935	Bulb, Oven
16	9781050	Light, Socket
17	3150144	Probe, Meat
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler
20	9750827	Rack, Roasting
21	9750823	Rack, Standard (3)
22	3148440	Sensor
	9781509	Screw 8-32 x 3/8
23	9781049	Lens, Light
24	3184533	Gasket, Lens

REAR CHASSIS PARTS

For Models: KGST307GWH0, KGST307GAL0, KGST307GBL0, KGST307GBT0, KGST307GBS0
(White) (Almond) (Black) (Biscuit) (Stainless Steel)

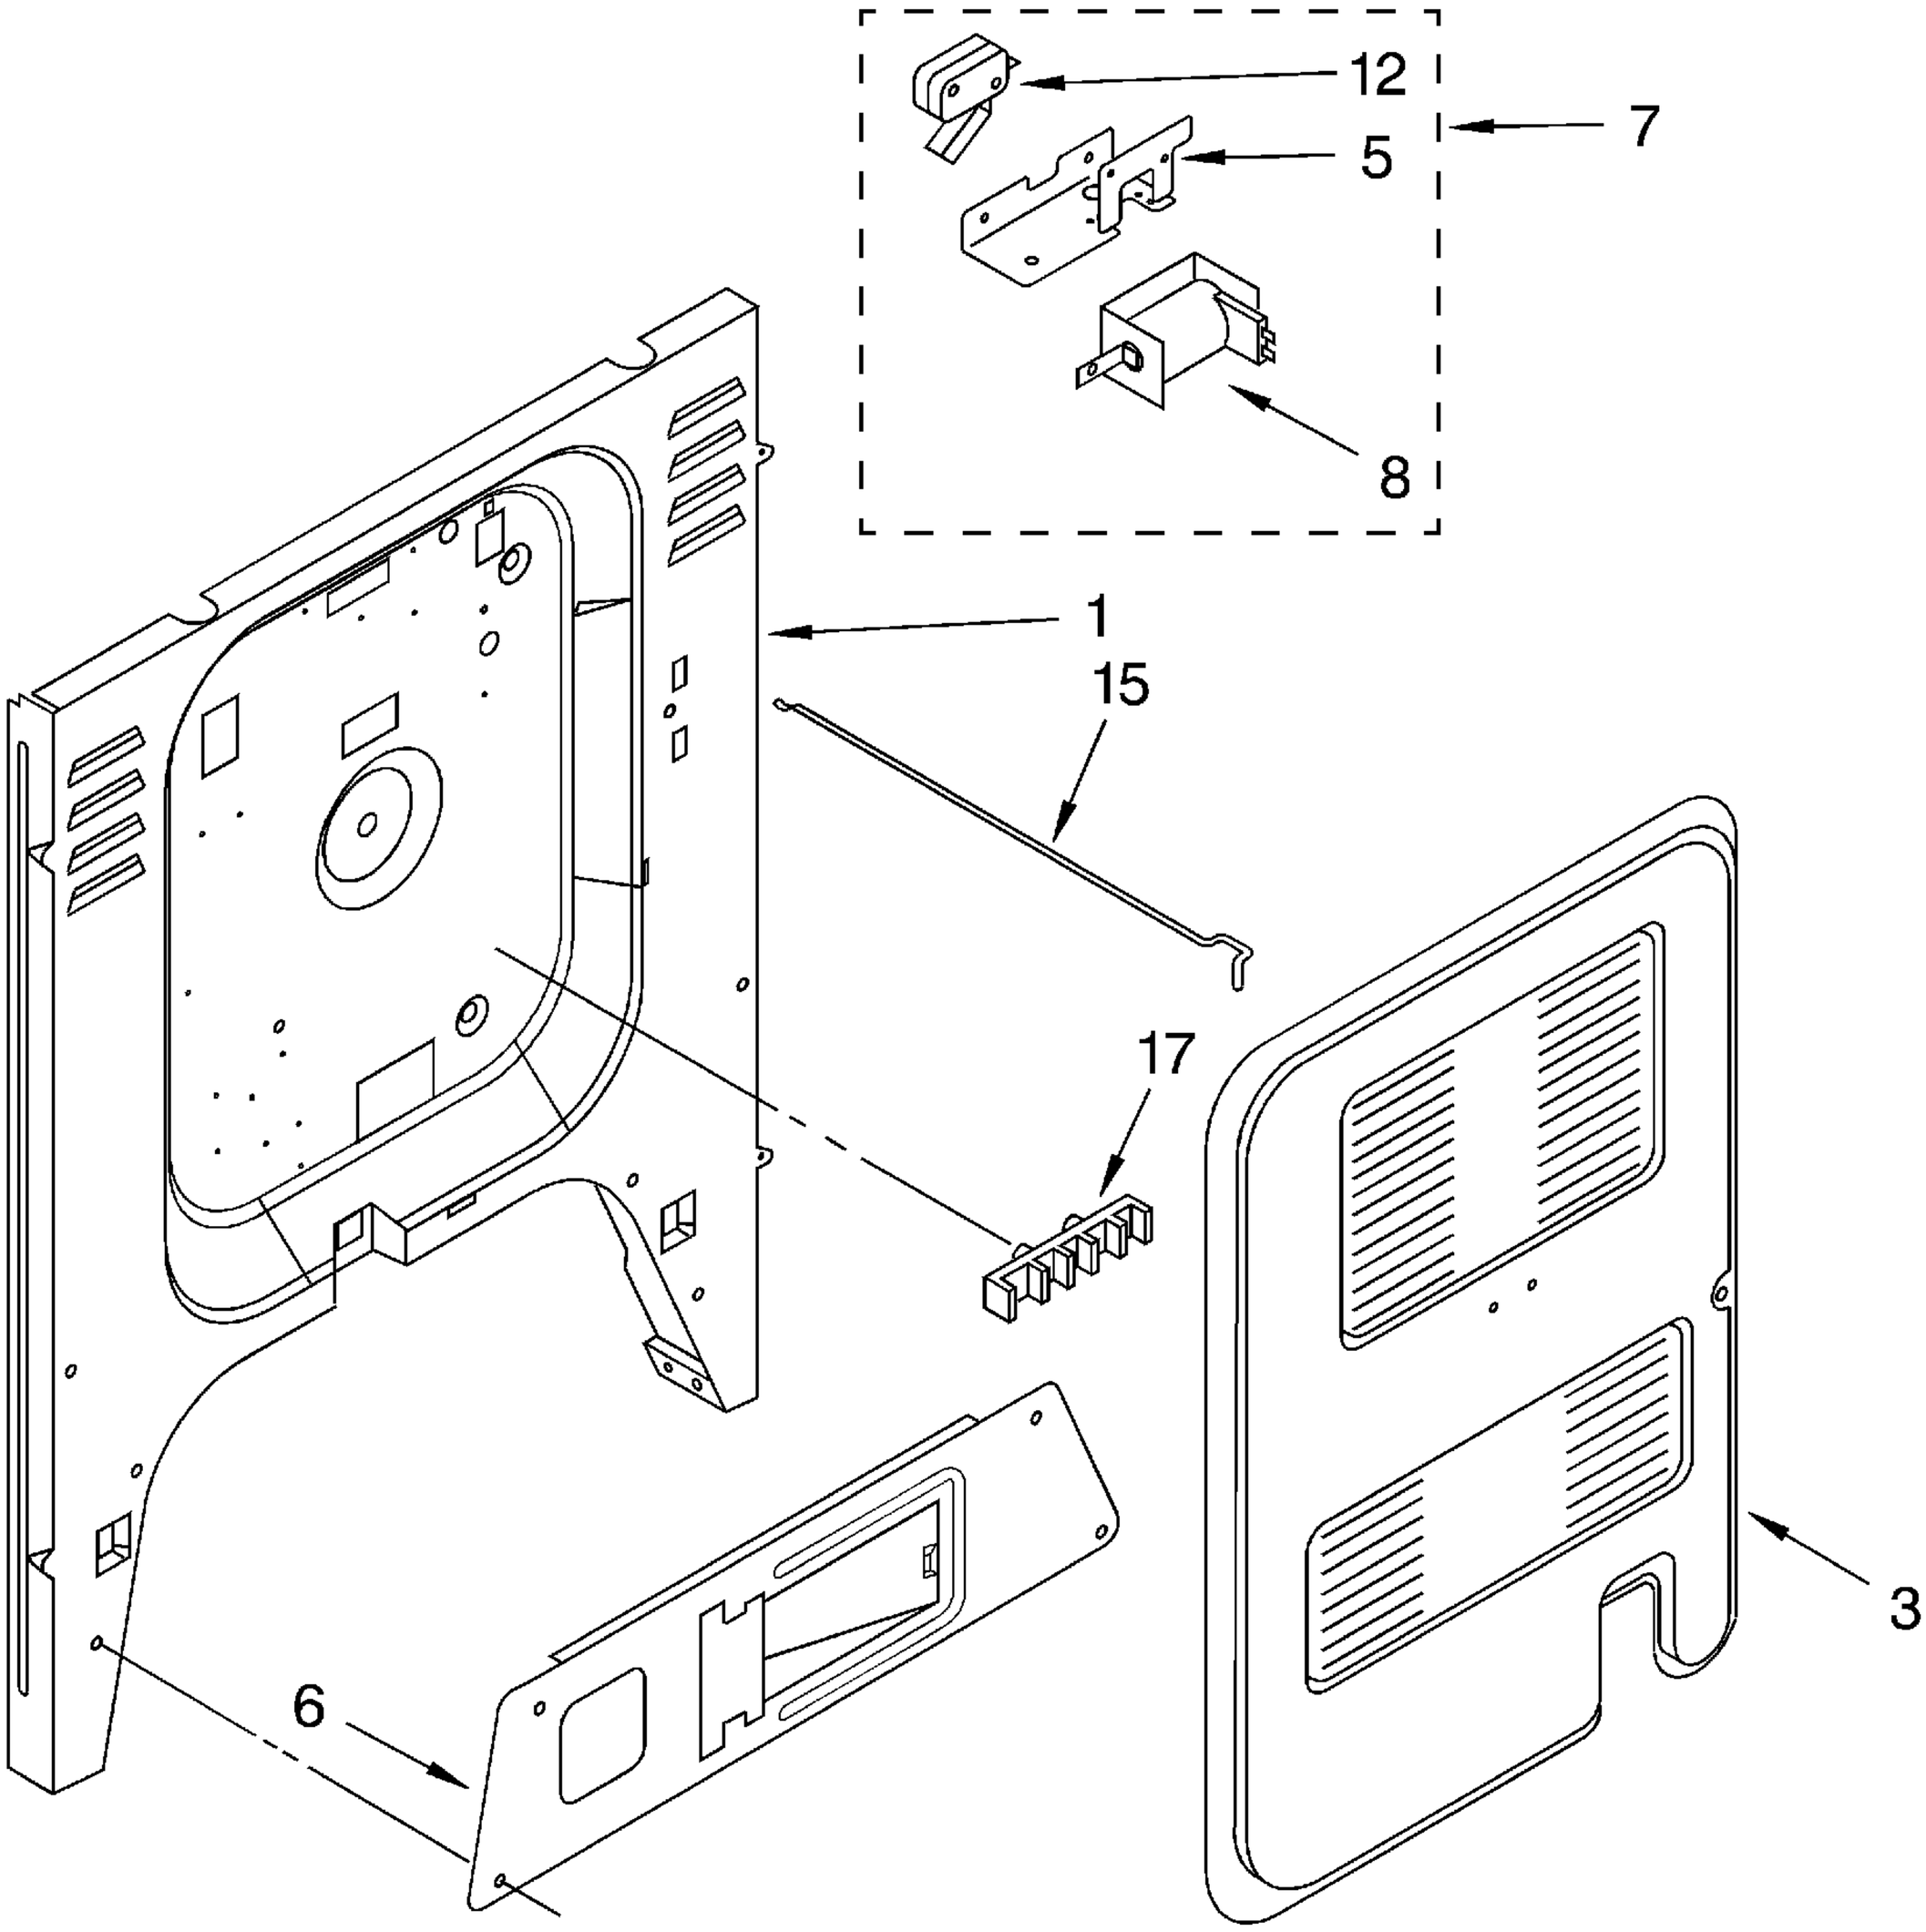

1	9751051	Back panel,Chassis
	340184	Screw (2) #10-16 x 1 1/2
3	9751353	Panel, Rear Cover
	423247	Screw (3) 10 x 3/8
5	9751418	Bracket, Lock
	9780265	Screw (2) 10 x 3/8
6	9751500	Bracket, Regulator-Valve
7	9751439	Oven Lock Assembly
	9780265	Screw (2) 10 x 3/8
8	9751590	Solenoid
	422222	Screw (2) 10-32 x 5/16
	424238	Washer
12	9751763	Switch, Interloc
	9750887	Screw, (2)
	9750888	Nut (2)
15	9750523	Rod, Lock
17	258076	Terminal Block
	98884	Screw (2) 10 x 1

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150~c
242820	Wire, Black 14 Ga. 150~c
242821	Wire, Blue 14 Ga. 150~c
242822	Wire, Brown 14 Ga. 150~c
242830	Wire, Brown 14 Ga. 200~c
242823	Wire, Green 14 Ga. 150~c
242824	Wire, Orange 14 Ga. 150~c
242829	Wire, Red 12 Ga. 150~c
242825	Wire, Red 14 Ga. 150~c
242831	Wire, Red 14 Ga. 200~c
242826	Wire, White 14 Ga. 150~c
242827	Wire, Yellow 14 Ga. 150~c
242832	Wire, Yellow 14 Ga. 200~c

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
72112	Toast
72113	Platinum
511873	**White Porcelain (2 Oz.)
4392899	Biscuit

**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

PAINT, PRESSURIZED SPRAY (13 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285365	Toast
285366	Platinum
285006	Superior Black
206922	Primer (White)

	4392901	Biscuit
PAINT, BULK (1 qt.)		
	799344	White (Uncut)
	978883	Almond (Uncut)
	261891	Harvest Gold (Uncut)
	285367	Toast (Uncut)
	285368	Platinum (Uncut)
	4392900	Biscuit(Uncut)
REFINISHING MATERIAL		
	799832	Kit, Porcelain Repair (White)
	242756	Touch-Up Self-Clean (1/2 Pt.)
INSULATION		
	9751164	Insulation, Wrap
	9750221	Insulation, Rear
	9751323	Insulation, Bottom
CLEANER, COOKTOP		
	3184477	Glass Cleaner
	3183488	Scraper
ACCESSORIES		
	241430	Foil, Aluminum Oven (18" X 25')
CONVERSION KIT		
		Gas Conversion Kit
	9751844	(LP)
	9752717	(Natural)
LUBRICANT		
	261582	Grease
ANTI-TIP KIT		
	9751745	Anti-Tip Kit
LITERATURE PARTS		
	LIT9752397	Installation Instructions
	LIT4449066	Cookbook T/C Ovens
	LIT9753310	Use & Care Guide
	LIT9752686	Smart & Easy Guide
	LIT9752669	Tech Sheet
	LIT9752969	Wiring Diagram (W/Fr)
	LIT9752775	Template, Anti-Tip
	LIT9752399	LP Conv Instructions
WIRING HARNESS PARTS		
	9781639	Harness, Wire (Main Harness)
	9751708	Harness, Wire (Neutral Gas)
	3190208	Harness, Wire (Spark Control)
	9750376	Harness, Wire (Oven Door)
	9752769	Harness, Wire (Spark Module)
	9752770	Jumper, Burner (4)
	9751868	Grommet, Harness
	9781055	Power Cord
	690989	Screw, Ground

3196520	Clip, Wire
98997	Clip
20082084	Tie, Wire